

Installation instructions INTELLO®

Installation steps



1. Install the membranes

Roll out the membrane and fasten it using galvanised staples with a width of at least 10 mm (3/8") and a length of 8 mm (5/16") at intervals of 10-15 cm (4" to 6"). In case of blown-in insulation: 5-10 cm (2" to 4"). Install the membrane leaving an additional 4 cm (1 5/8") overlap at adjacent building components so that an airtight bond can be applied here subsequently.



2. Fasten to stud wall frame members

Fastening of membranes to metal frame members on stud wall and ceiling structures using pro clima DUPLEX. Stick the membrane, ensuring that there are no folds or tension. Rub using the PRESSFIX application tool to secure.



3. Overlap the membranes

Allow for an overlap of approx. 10 cm (4") between the membranes. The marking that is printed onto the membrane will serve as a guide here.



4. Clean the subsurface

Clean the subsurface (dry and free of dust, silicone and grease) and carry out an adhesion test, if necessary.



5a. Stick the overlaps

Centre the TESCON VANA system adhesive tape on the overlap and gradually stick it in place, ensuring that there are no folds or tension.




5b. Rub the adhesive joint firmly

Rub tape firmly into place using the pro clima PRESSFIX. Ensure that there is sufficient resistance pressure.




6. Sealing to smooth, non-mineral substraces ...

... (e.g. knee walls made of wood-based panels) should also be implemented using TESCON VANA system adhesive tape. Centre the tape and gradually stick it in place, ensuring that there are no folds or tension. Rub tape firmly into place using the pro clima PRESSFIX.

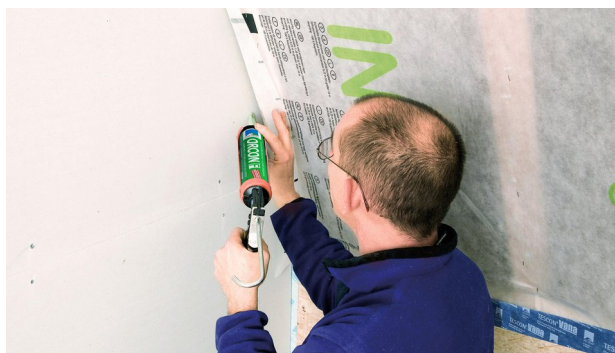


7. Sealing to rough or mineral substraces

Clean the subsurface. Apply a line of ORCON F system adhesive of at least d = 5 mm (3/16"), or more in the case of very rough substraces if necessary. Place INTELLO onto the adhesive bed, leaving slack to allow for expansion. Do not press the adhesive completely flat.

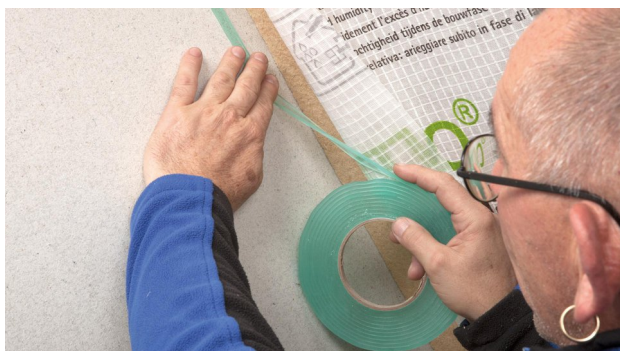

8a. Alternative: Sealing to mineral substraces

Position ORCON MULTIBOND on the subsurface, roll it out and gradually stick it to the subsurface. Gradually remove the release film.

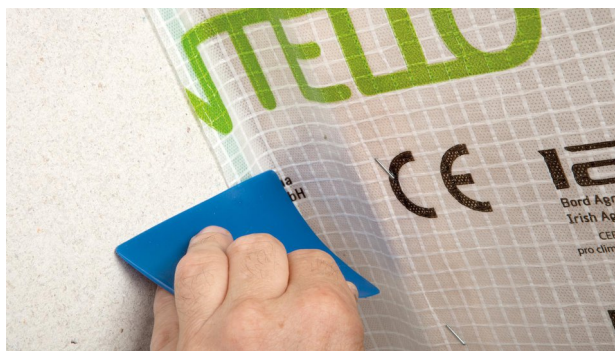

8b. Sticking the membrane / Rubbing the joint firmly

Apply the membrane onto the adhesive strip, leaving slack for expansion so as to allow for relative motion between components. Rub tape firmly into place using the pro clima PRESSFIX. Ensure that there is sufficient resistance pressure.



9. Sealing to unplastered substraces

Stick the CONTEGA PV plaster sealing tape onto INTELLO using self-adhesive strips. Ensure the tape remains in place by using ORCON F at discrete points. First plaster behind the tape, then apply the tape to the wet plaster and plaster over it fully.



10. Masonry gable end wall, creating an airtight joint

Put the vapour check in place. Leave slack for expansion so as to allow for relative motion between components. Remove all release films from CONTEGA SOLIDO SL or CONTEGA SOLIDO IQ. Centre the tape and gradually stick it in place. Rub tape firmly into place using the pro clima PRESSFIX.



11a. Sealing to roughly sawn timber

Clean the subsurface. Apply a line of ORCON F system adhesive of at least $d = 5 \text{ mm}$ ($3/16''$), or more in the case of very rough subsurfaces if necessary. As an alternative, a roll of ORCON MULTIBOND joint adhesive can be used.



11b. Sealing to roughly sawn timber

Place INTELLO onto the adhesive bed, leaving slack to allow for expansion. Do not press the adhesive completely flat.



12a. Sealing to plastered chimney (insulated or double-shelled)

Seal INTELLO using ORCON F as shown in Figure 7.



12b. Sealing to plastered chimney (insulated or double-shelled)

Then cut into short pieces of TESCO VANA as far as the centre, create corner shapes and then stick in place.



13. Joints to pipes and cables

Place a KAFLEX or ROFLEX sealing grommet over the cable or pipe and stick to INTELLO. The cable grommets are self-adhesive. Stick the pipe grommets to the membrane using TESCO VANA.



14. Corner bonding

Guide TESCO PROTECT prefolded corner sealing tape into the corner on the release film and stick the first independent adhesive strip. Then remove the release film and stick the second independent adhesive strip.



15. Battens, interior cladding

Install battens (e ≤ 50 cm; 1' 8") to bear the weight of the insulation, and install interior cladding to provide protection against UV light and other damage.



16. Quality assurance

It is recommended that airtightness should be checked using a blower door test.

General conditions

Where possible, INTELLO (and INTELLO PLUS) are installed in such a way that adhesion can be carried out using single-sided adhesive tape on the smooth (printed) side of the sheeting. They can be installed taut and without slack either in parallel with or perpendicular to the supporting structure, e.g. the rafters. In the case of horizontal installation (perpendicular to the supporting structure), the separation distance of the supporting structure is limited to a maximum of 100 cm (3'). After installation, perpendicular battens on the inside at a separation distance of a maximum of 50 cm (1' 8") must be fitted to carry the weight of the insulation material.

If regular tensile loads on adhesive tape bonds are to be expected – for example, due to the weight of the insulation material – when using mat or panel-shaped insulation materials, an additional supporting batten should be fitted over the overlap bonding. When attaching the membranes in the case of mat or panel-shaped insulation materials, a maximum separation distance of 10 to 15 cm (4" to 6") applies for the fastening staples, which must be at least 10 mm (3/8") wide and 8 mm (5/16") long. The overlaps between the membrane strips must be approx. 8 to 10 cm (3" to 4").

Airtight seals can only be achieved on vapour checks that have been fitted with no folds or creases. Ventilate regularly and systematically to prevent build-up of excessive humidity (e.g. during the construction phase). Occasional, intermittent ventilation is not sufficient to remove large quantities of moisture due to construction work from a building; use a dryer if necessary.

To avoid condensation formation, the thermal insulation should be installed immediately after airtight adhesion of INTELLO. This particularly applies when working in winter.

The information provided here is based on practical experience and the current state of knowledge. We reserve the right to make changes to the recommended designs and processing or to make alterations due to technical developments and associated improvements in the quality of our products. We would be happy to inform you of the current technical state of the art at the time you use our products.

Further information about the application and construction can be found in the pro clima planning documentation. For queries please call the pro clima technical hotline on +49 (0)6202 278245.

MOLL

bauökologische Produkte GmbH
 Rheintalstraße 35 - 43
 D-68723 Schwetzingen
 Fon: +49 (0) 62 02 - 27 82.0
 eMail: info@proclima.de